


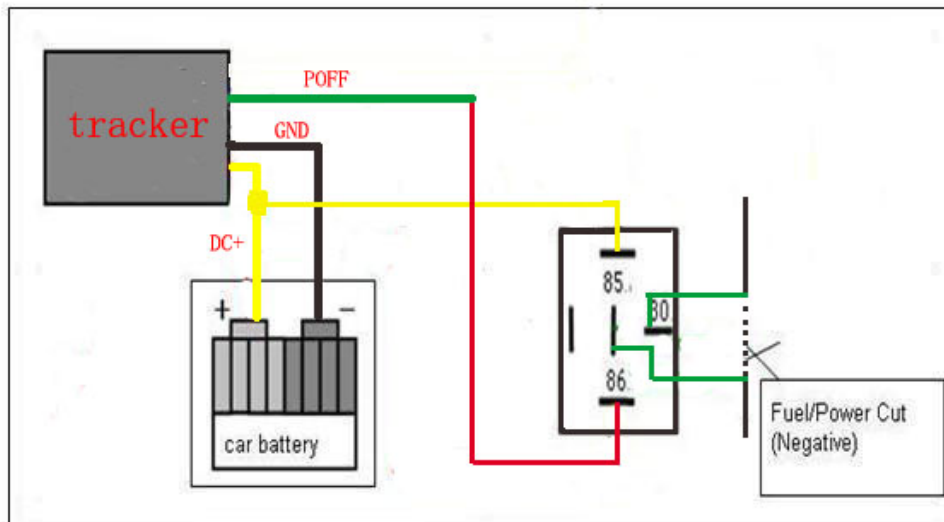

Relay connection: (It does not matter tracker type, all the same. Only **tracker Green POFF line**):

1. Find tracker **POFF line**, Find Relay **Red line**. Connect them.
2. Find tracker **Yellow DC+ line**, Find Relay **Yellow line**, connect them together to car battery positive.
3. Find car power or car fuel negative line. Cut one of them off into 2 parts (A. B part). Find Relay 2 **Green lines**. Connect one Green to A, the other to B.

(New Relay color is changed. Please find the White line to connect tracker PoFF line)

A000000,007,0 is to cut off engine

A000000,007,1 is to turn on engine

Each time command is sent, wait for around 2 mins to let it activate.

